

INDEX

A

Armature plate 188-190

B

Battery
 Charging 29-30
 Inspection and service 29
 Installation 30
 Removal 28
 Safety precautions 28-29
 Specifications 28
 Bearings 121
 Breaker points
 Adjustment, 1.5-2 hp (static method) ... 34-36
 Adjustment, 1.5-2 hp (strobe light method) 34
 Adjustment, 3-33 hp 36
 Periodic maintenance 33-36

C

Carburetor
 Adjustment, 1.5-6 hp 44
 Adjustment, 9.5-25 hp 44-45
 Adjustment, 33 hp 46
 Choke solenoid, 33 hp 70
 Cleaning 67
 Core plugs 68-70
 Disassembly, 1.5-6 hp 63
 Disassembly, 9.5 hp 65
 Disassembly, 18-25 hp 65-66
 Disassembly, 33 hp 66-67
 Float needle and valve 67-68
 Intake manifold, 33 hp 70
 Lead shots, all except 9.5 and 33 hp 70
 Needle adjustment, 1.5-6 hp 44
 Needle valves 68
 Oil drain valve 72
 Operation 55-56
 Reassembly, 1.5-6 hp 70
 Reassembly, 9.5 hp 71
 Reassembly, 9.9-15 hp 71
 Reassembly, 18-25 hp 71-72
 Reassembly, 33 hp 72
 Recirculating valve, 9.9-33 hp 70
 Reed valves 68
 Removal and installation 56-63
 Cleaning and inspection (power head)
 Bearings 121
 Cylinder and crankcase 119

Gaskets 120
 Pistons 120-121
 Cooling system 26
 Crankcase, cleaning and inspection 119
 Crankcase and cylinder reassembly
 and installation 123-124
 Crankshaft installation 122-123
 Cylinder head gasket coating (1976-1978) .. 191
 Cylinder-piston clearance (1976-1978) 191
 Cylinder, cleaning and inspection 119

D

Decarbonization 38-39
 Desalinization 39-40

E

Electrical system
 Armature plate 188-190
 Battery 28-30
 Breaker points 33-36
 Condenser (capacitor) 33
 Connection problems 187-188
 Electric starter 86
 Magneto operation 30-31
 Magneto removal and installation 77-86
 Spark plug anti-fouling kit 188
 Spark plugs 31-33
 Troubleshooting 50-51
 Voltage regulator kit 188
 Wiring diagrams 89-101
 Electric motors (see Motors, electric)
 Engine operating requirements 47
 Engine operation, principles of 23-24
 Exhaust housing (see Gearcase and
 exhaust housing)
 Exhaust relief 133-134

F

Flat spots in engine operation 50
 Fuel system
 Carburetor cleaning and repair 67-72
 Carburetor disassembly 63-67
 Carburetor maintenance, periodic 44-46
 Carburetor operation 55-56
 Carburetor reassembly 70-72
 Connector housings 75-76
 Fuel filter maintenance, periodic 39
 Fuel line, screen, and nipple assembly 76

Fuel/oil mixture	26, 27
Fuel pump and filter cleaning, inspection, and repair	74
Fuel pump and filter removal and installation	73
Fuel pump troubleshooting	50
Fuel tank	74
Gas gauge	74-75
Horsepower restrictor kit	187
Hose and primer bulb assembly clamps ...	75
Removal and installation, 1.5-2 hp	56-58
Removal and installation, 3-6 hp	58
Removal and installation, 9.5 hp	58-59
Removal and installation, 9.9-15 hp	59-61
Removal and installation, 18-25 hp	61-62
Removal and installation, 33 hp	62-63
Throttle cam adjustment (1976-1978)....	187
Vent	76

G

Gas gauge	74-75
Gaskets	120
Gearcase and exhaust housing	
Cleaning, inspection, and repair	161-163
Exhaust-to-gearcase alignment	163
Gearcase pressure test	163
General information	137
Removal and installation, 1.5-2 hp	141-143
Removal and installation, 3-5 hp	143
Removal and installation, 6 hp	143
Removal and installation, 9.5 hp	151
Removal and installation, 9.9-15 hp	151
Removal and installation, 18-33 hp	158
Removal and installation (1976 35 hp) ..	193
Shifter adjustment, 9.5 hp	139
Shifter adjustment, 9.9-15 hp	139
Shifter adjustment, 18-33 hp	139-141
Gearshift	134
General information	1-6

H

Horsepower restrictor kit	187
---------------------------------	-----

I

Idling, poor	49
--------------------	----

L

Lower unit	
Clamp screw swivel plate	137
Gearcase (1976-1978)	193
Gearcase and exhaust housing	137-163
Gearshift	134
Exhaust relief	133-134
Motor mounts	133, 193

Propeller	163
Steering friction	137
Steering handle	164
Tilting friction	134
Water pump	134, 193
Lubrication	
Fuel/oil mixture	26, 27
General information	23
Lubrication points	24
Moving parts (external) lubrication	27
Oil change	25
Oil level check	24-25

M

Magneto	
Installation	86
Operation	30-31
Removal, 1.5-2 hp	77
Removal, 3 hp rope start (1966-1967) ...	77-79
Removal, 3 hp spring starter (1968) and all 4, 5, and 6 hp	79
Removal, 9.5 hp	79-83
Removal, 9.9-15 hp	83
Removal, 18-25 hp	83
Removal, 33 hp	83-86
Troubleshooting	51-52
Maintenance, periodic	
Battery	28-30
Breaker points	33-36
Carburetor	44-46
Condenser (capacitor)	33
Decarbonization	38-39
Desalinization (salt water running maintenance)	39-40
Emergency starting	42-43
Fuel filter	39
Magneto	30-31
Motor installation	40-42
Motor lifting	43-44
Motor removal	42
Neutral start switch	37-38
Shift lock stop	36-37
Spark plugs	31-33
Storage, winter	39
Trailerling	42
Water pump/cooling system	26
Misfiring	49-50
Model identification	1
Motor, operating requirements	47
Motor, principles of operation	23-24
Motor installation	
Angle adjustment	42
Battery	40
Propeller	41
Remote control (accessory)	41
Tilting	41
Motor lifting	43-44
Motor mounts	133, 193

- Motors, electric
 Adjustment180-183
 Cable replacement179-180

N

- Neutral start switch37-38
 Noises, unusual 50

O

- Overheating 50

P

- Pistons and rings
 Cleaning and inspection120-121
 Clearances191, 192
 Rings (1976-1978) 192
 Reassembly and installation 122
 Removal118-119
 Piston seizure 50
 Power head
 Assembly121-124, 191-192
 Cleaning and inspection119-121
 Cylinder head gasket coating (1976-1978) 191
 Disassembly, 1.5-2 hp 109
 Disassembly, 3-4 hp 109
 Disassembly, 5-6 hp109-113
 Disassembly, 9.5 hp113-116
 Disassembly, 9.9-15 hp 116
 Disassembly, 18-33 hp 116
 Installation 124
 Overheating (1976-1978 35 hp) 191
 Removal, 1.5-2 hp 102
 Removal, 3-4 hp 103
 Removal, 5-6 hp 103
 Removal, 9.5 hp 103
 Removal, 9.9-15 hp103-107
 Removal, 18-33 hp 107
 Power loss 50
 Propeller 163

S

- Service hints 2-4
 Shifter adjustment139-141
 Shift lock stop36-37
 Spark plug anti-fouling kit 188
 Spark plugs
 High-tension leads (1976-1978) 185
 Recommendations (all years)185-186
 Removal and installation31-33
 Troubleshooting50-51
 Specifications and clearances
 1.5 and 2 hp 7-8
 2 hp, 1-cylinder (1976-1978)194-195
 3 hp 9-10

- 4 hp11-12
 4 hp, 2-cylinder (1976-1978)196-197
 5 and 6 hp13-14
 6 hp, 2-cylinder (1976-1978)198-199
 9.5 hp15-16
 9.9 and 15 hp17-18
 9.9 and 15 hp, 2-cylinder (1976-1978) 200-201
 18 and 25 hp19-20
 25 and 35 hp, 2-cylinder (1976-1978) 202-203
 33 hp21-22

- Starter, electric 86

Starter, manual

- Assembly, 1.5-2 hp (1966-1967)169-170
 Assembly, 3 hp (1968) and 4 hp170-172
 Disassembly, 1.5 and 3 hp (1966-1967) 166-167
 Disassembly, 3 hp (1968) and 4 hp 170
 Installation, 9.9-15 hp 175
 Removal, 3 hp (1968) and 4 hp 170
 Removal, 9.9-15 hp 174
 Removal, 18-25 hp 175
 Removal and installation, 1.5-2 hp
 and 3 hp (1966-1967)166-167
 Removal and installation, 33 hp 177
 Rope replacement, 5-9.5 hp172-174
 Rope replacement, 9.9-15 hp 174
 Rope replacement, 18-25 hp175-177
 Rope replacement, 33 hp177-178
 Starter lockout adjustment, 18-25 hp 177
 Starter lockout adjustment, 33 hp 178
 Starting, emergency42-43
 Starting difficulties48-49
 Steering friction 137
 Steering handle 164
 Storage, winter 39

T

- Temperature, engine 102
 Throttle cam adjustment (1976-1978) 187
 Tilting friction 134
 Torque charts, 1965-1975
 (see Specifications and clearances)
 Torque chart, 1976-1978 204
 Trailering 42
 Troubleshooting
 Electrical problems50-51
 Engine noises 50
 Engine operating requirements47-48
 Excessive vibration 50
 General information 47
 Flat spots 50
 Fuel pump 50
 Idling, poor 49
 Instruments 48
 Overheating 50
 Piston seizure 50
 Power loss 50
 Magneto51-52
 Misfiring49-50

Starting difficulties48-49
Summary 52
Tune-up procedures27-28

V

Vibration, excessive 50
Voltage regulator kit 188

W

Water pump26, 134, 193
Wiring diagrams
Motor and instrument cables 101

Wiring harness, typical, with
electric starter 100
1.5-2 hp 90
4 hp (1976-1978) 205
6 hp (1976-1978) 206
9.9-15 hp with electric starter 92
9.9-15 hp with manual starter
(3.9-5 hp similar) 91
10-15 hp with manual start (1976-1978) .. 207
18-20 hp with electric starter94-95
18-33 hp with manual starter 93
25 hp with electric starter96-97
25-35 hp with manual start (1976-1978) .. 208
33 hp with electric starter98-99